

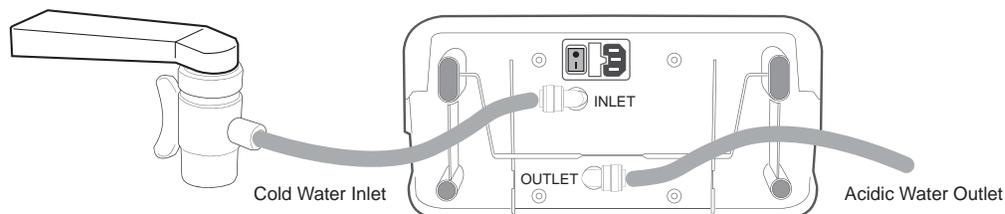
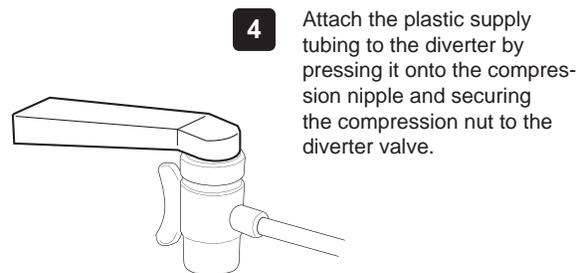
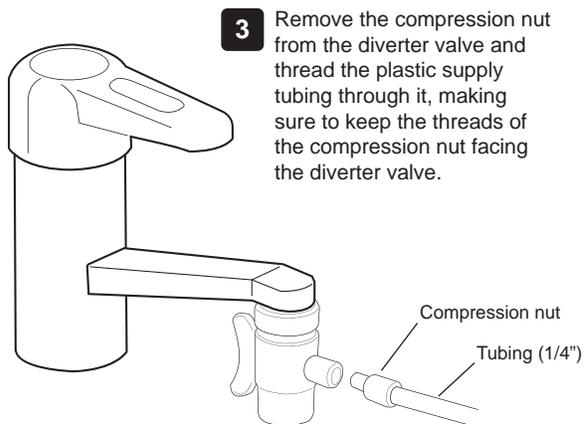
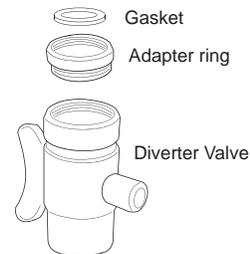
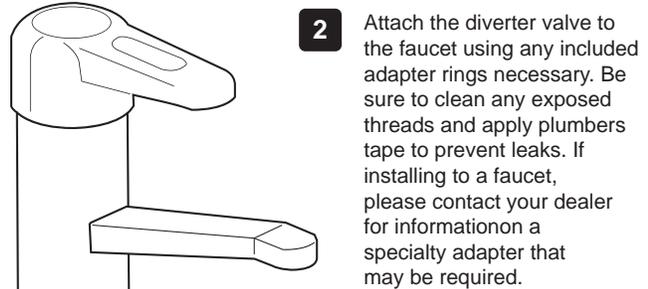


Installation to Faucet(Counter top)

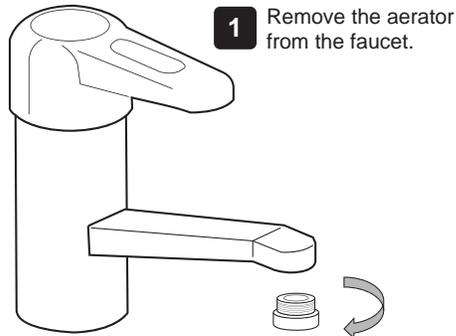


5 Connect hoses to the water Inlet and Acidic water Outlet.


Installation Direct to Cold Water Line

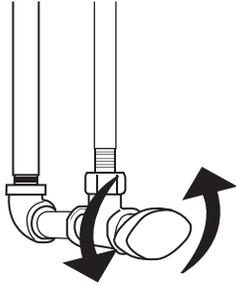


1 Find the cold water supply line and close the valve.

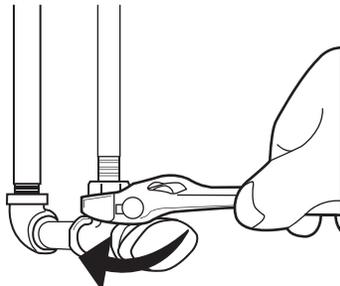


2 Disconnect the cold water hose from the line. Make sure it is the cold water hose and not hot because hot water will cause the unit to malfunction.

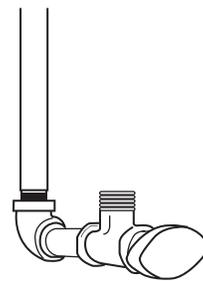


3 Separate the water line.

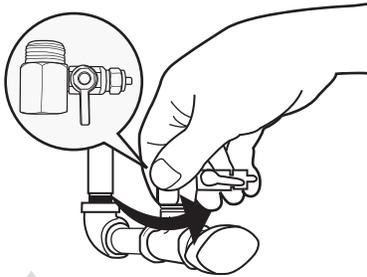

4 Connect the cold water line adapter to the cold water supply valve as shown. As fittings vary you will need to find the right size adapters at your local plumbing store.

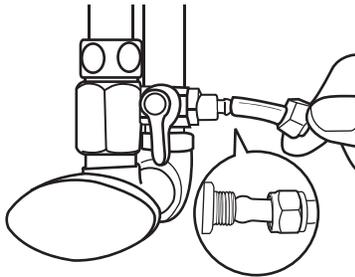

5 Connect the plastic tubing as shown.

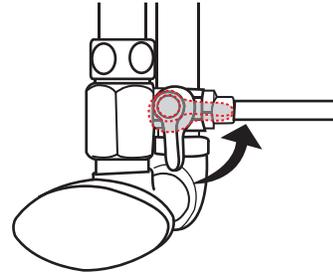


6 Connect hoses to the water inlet and acidic water outlet then open the cold water supply valve.


CAUTION

- Be sure the valves are all connected tightly to prevent leakage.
- Be sure of where you want to install the ionizer as a hole needs to be drilled through the sink top to thread the tube.
- Be sure you connect the unit to cold water as hot water can damage the unit.
- This is a good time to double check and make sure all your fittings are tight and the tubing is secure in the fittings.
- Check daily for any leaks during the first week after installation and check for leaks occasionally thereafter.

Faucet Installation Guide

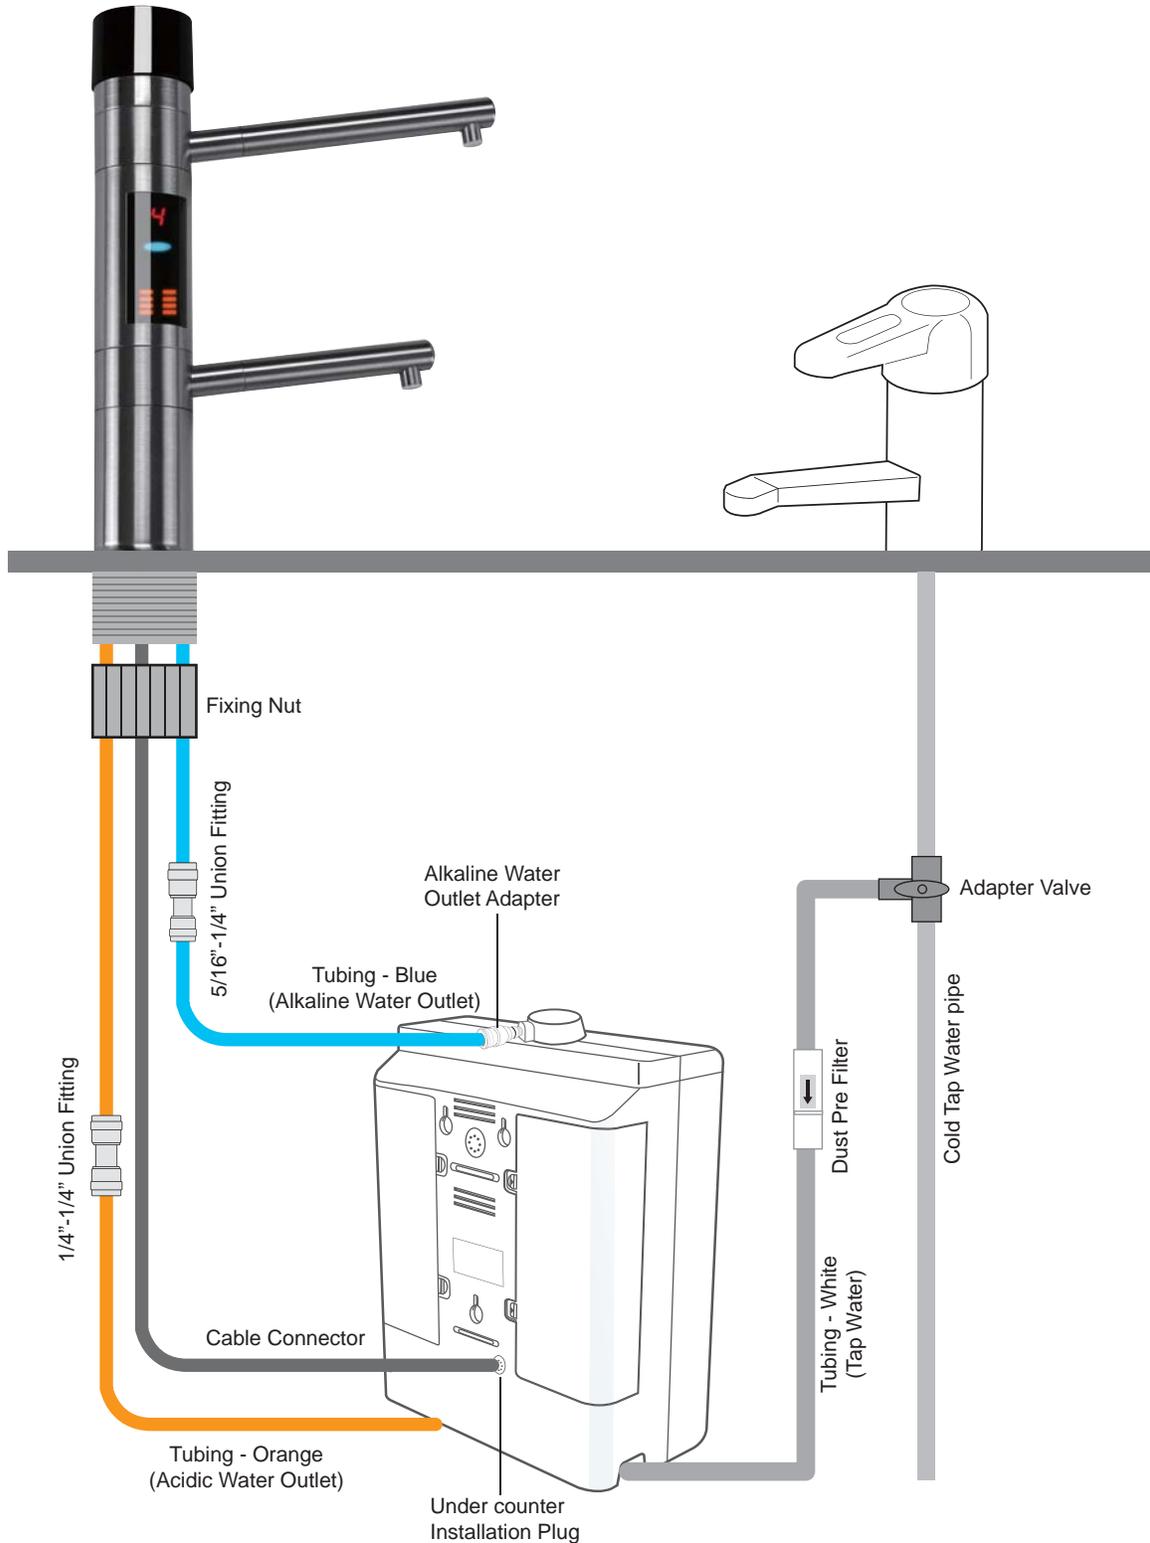


Faucet Installation Guide

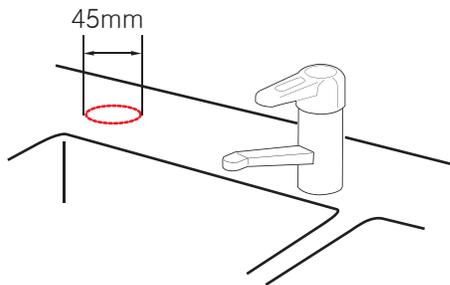

1 Use appropriate tools to make 45mm diameter hole in the location where you will set up the faucet. Make sure the faucet location will allow both spouts to reach the sink.

2 Insert the faucet in the hole and then screw it with a nut to make it be fixed.

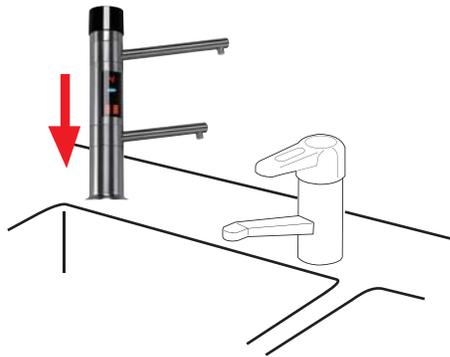

3 After the faucet is fixed, connect it to fitting hose (for Alkaline-Blue). Check the hose whether it is inserted properly or not. Also, connect it hose (for Acidic-Orange) connect the faucet to the body.

4 Place the Ionizer in an appropriate place under your sink

5 Connect the Acidic Water Hose (Orange color) to the 1/4"-1/4" Union fitting on the Acidic Hose extending from the faucet to Acidic Water Outlet on the Ionizer. Pull firmly to check to connection - you should not be able to pull the hose out.

6 Connect the Alkaline Water Hose (Blue color) attached to the threaded stem of the faucet to the Alkaline Water Outlet on the ionizer. Pull firmly to check to connection - you should not be able to pull the hose out.

7 Install the dust pre-filter in the middle of a length of 1/4 inch hose with the arrow pointed at the ionizer. Connect the 1/4 inch hose with dust filter to Tap Water Inlet on the bottom of the ionizer. Pull firmly to check to connection - you should not be able to pull the hose out.

8 Join the cable connector from the faucet to the Connect Wire. Plug the Connector Cord into the Connector Plug on the back of the ionizer.

9 Connect the power cord into an appropriate outlet.